


INSTALLATION AND SERVICE INSTRUCTIONS FL206

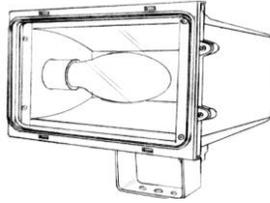

PRECAUTION :

1. Read instructions carefully before attempting to install fixture. Retain instruction for future reference.
2. Disconnect power before installing or servicing. This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances.
3. Proper grounding is required to ensure personal safety.
4. All wiring should be performed by a qualified electrician.
5. This fixture is for outdoor use and should not be used in areas with limited ventilation or high ambient temperatures.

AVERTISSEMENT:

S'assurer que toute alimentation possible est COUPÉE avant de commencer l'installation ou l'entretien.
Tout le câblage doit être fait par un électricien certifié.

INSTALLATION :

This flood light is supplied with trunnion mounting bracket for surface mounting; make sure fixture is securely mounted. The trunnion mounting bracket offers five different positions. There are three position holes in the outer yoke and five positioning holes in the inner yoke. To make a selection, remove the positioning screw, loosen trunnion bolts, and rotate trunnion to desired angle. Reinsert positioning screw and tighten.

WIRING :

Set Ballast Voltage – See the ballast wiring label and the rating label to locate the power tap to the appropriate voltage tap. If supplied with a single voltage tap, make sure the voltage furnished to the fixture is the same as specified on the unit.

Make sure all unused ballast taps are capped to avoid a short circuit to the reflector when the fixture is energized.

REPLACING LAMP :

DISCONNECT ELECTRICAL
CIRCUIT BEFORE REPLACING LAMP.

1. Release the screws and open the door frame.
2. Replace the correct lamp.
3. Close the door frame by tightening the screws.

TROUBLE SHOOTING CHECK LIST : If the light does not work.

Check your power source.

Check electrical connections.

Check to insure proper seating of lamp.

Check if lamp burned out.