



# LBL-KDB-R2

## Hard Wired Doorbell Receiver



Project: \_\_\_\_\_

Location: \_\_\_\_\_

Qty: \_\_\_\_\_

Notes: \_\_\_\_\_

### DESCRIPTION

Doorbell Receiver Hard Wired

Works with the Light by Lotus Kinetic Doorbell Transmitter LBL-KDB-T1

### FEATURES & BENEFITS

100 feet operating range

Standard switch size to fit in wall mounted wire boxes

Easy pairing with kinetic doorbell transmitter

Pair up to 10 transmitters

Choose from 38 melodies with 4 levels of volume, plus a flashing light

SPECIFICATION	
Applications	Homes, Multi-Family, Workshops, etc.
Input Voltage	100 - 240 V AC
Standby Power	0.5 W
Volume Levels	4
Ringtones	38
Pairing Capacity	up to 100 receivers to 1 transmitter
	up to 10 transmitters to 1 receiver
Operation Range	100 feet
Frequency	433 MHz
Operating Temperature	Receiver: -10°C to + 55°C (14°F to 130°F)
	Transmitter: -40°C to + 55°C (-40°F to 130°F)
Approved Location	Receiver: Indoor only
	Transmitter: Outdoor IP67
Certifications	c ETL us, FCC
Warranty	2 Year

### USER GUIDE

#### Transmitter - Receiver Pairing:


Press and hold the Tune key for 3 seconds until the indicator light start to flash slowly (once per second). Release the key and press the doorbell transmitter once. Indicator light will turn off, which means pairing is successful.

#### Clear Pairing:

Press and hold the Tune key for 7 seconds until the indicator light turns from flashing to steady light and then turns off, then release the key. Pairing is cleared.

#### Volume - key:

Press to reduce volume.  
Lowest level is silent mode.

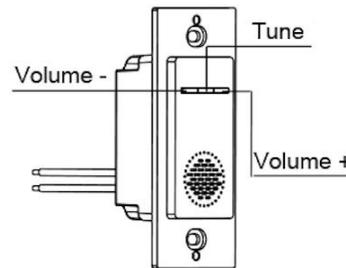

#### Tune key:


Press to switch ringtones.  
Long press to pair transmitters.

#### Volume + key:

Press to increase volume.  
4 levels available.

Note: Hard wired receiver could be used in combination with the Kinetic Transmitter, Kinetic Door Sensor (will sound when door opens or closes) & Plug-in Receiver.

Tune memory: In case of power disconnection, doorbell remembers the last set tune and volume.

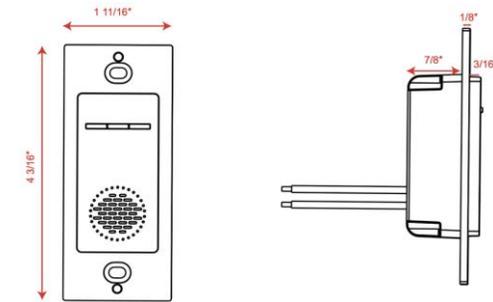

### ORDERING GUIDE

**Hard Wired Doorbell Receiver** **LBL-KDB-R2**

Kinetic Transmitter **LBL-KDB-T1**

#### Optional:

Set or Transmitter and Plug-in Receiver **LBL-KDB-1**

Plug-in Receiver **LBL-KDB-R1**

Kinetic Door Sensor **LBL-KDS**



**Lotus LED Lights USA**  
250 H Street # 301, Blaine WA 98230 tel 360-200-5500  
Hainesport NJ, Naples FL, Vancouver WA

[www.LotusLEDLights.com](http://www.LotusLEDLights.com)  
mailing addresses  
warehouses

**Lotus LED Lights CANADA**  
1080 Cliveden Ave # 6, Delta BC V3M 6J6 tel 604-538-3090  
Delta BC & Mississauga ON