 
 
MaxLite

General Safety Information

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.



(1)



• DO NOT INSTALL DAMAGED PRODUCT!

WARNING:

RISK OF ELECTRICALSHOCK

- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- Make all electrical and grounded connections in accordance with the National Electrical Code and any applicable local code requirements.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION:

RISK OF INJURY

- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.

CAUTION:

RISK OF FIRE

- Keep combustible and other materials that can burn away from luminaire and lamp/lens.
- MIN 90°C SUPPLY CONDUCTORS.

Page: 1

 
REV: 11/17/17

MaxLite

Page: 2


REV: 11/17/17

Wiring Instructions




Connect the green (ground), black (line) and white (neutral) wires of the AC line to the similarly colored wires of the fixture's power supply using UL listed connectors. Place all connections and exposed wire inside of fixture and reattach power access plate.

100W EM Wiring Instructions

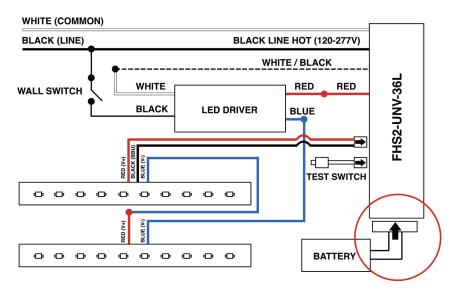

150W & 200W EM Wiring Instructions

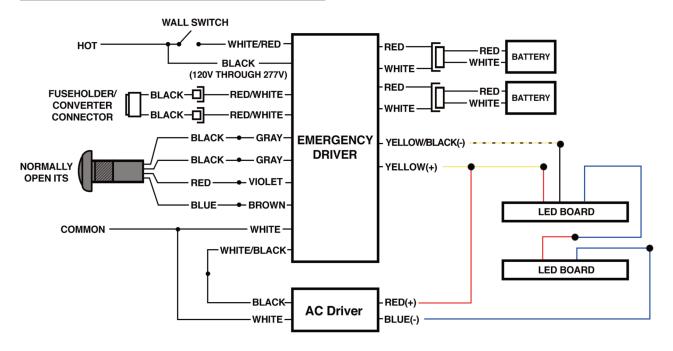



Page: 3

REV: 11/17/17


Mounting Instructions

CAUTION: Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.

Chain Mount:




Run chains through V hooks and attach onto fixture.

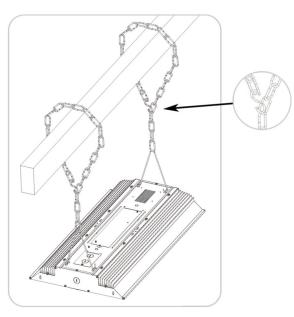


Locate secure structural member and inspect for damage. Secure chains around member and lock with S hook.

Aircraft Cable Mount:

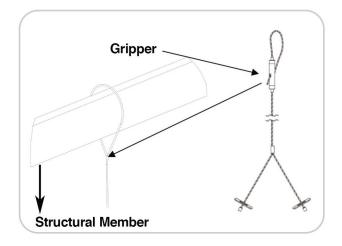

Locate secure structural member and inspect for damage. Secure aircraft cable around member and run through gripper to fasten. Cable enters and exits through side of gripper.

Secure bottom aircraft cable toggles onto LED high bay by inserting toggles through 0.375" hole.

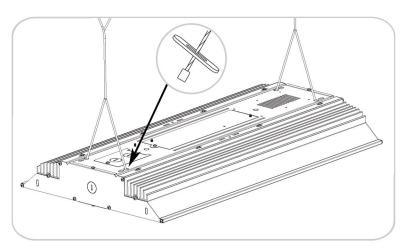


Adjust fixture height by drawing cable through gripper.

MaxLite


Mounting Instructions

CAUTION: Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.


Mono-Stem Mount:

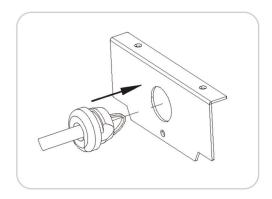


Locate secure threaded pole and inspect for damage. Use the cord grip provided to securely attach wires onto side bracket.

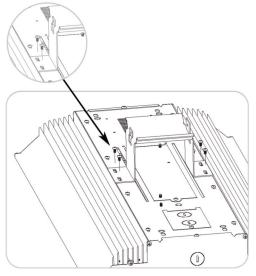


Attach base bracket onto fixture by inserting 4 x #8 screws

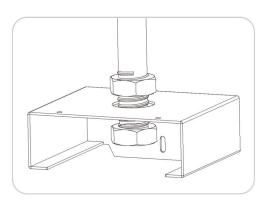

Secure top pendant mount bracket onto stem/pole by placing one nut before installing bracket and one nut after.

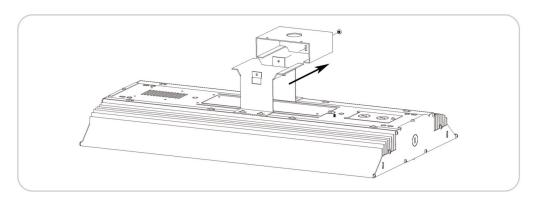

Slide assembled fixture onto pole. Wire input wires to fixture.

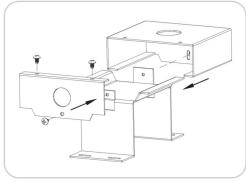

Page: 4

REV: 11/17/17


Attach cover by tightening 3 x #8 screws.




Mounting Instructions

CAUTION: Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.


Surface Mount:

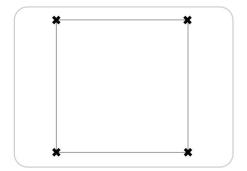

Locate secure structural member and inspect for damage. Mount top surface mount bracket onto flat surface with 4 x #10 screws. Use drill pattern figure above.

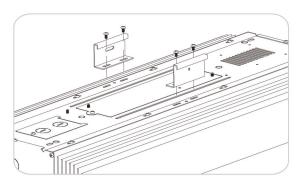


Secure 2 Z brackets onto fixture with 4 x #8 screws. Follow figure 3 for proper installation guidelines for methods of positioning the Z bracket.

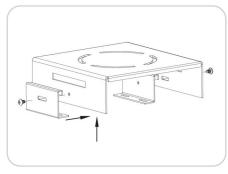


Lift LED high bay and guide Z brackets through top bracket slot openings and let rest. Secure Z brackets to surface mount bracket using 2 x #8 screws.

Stem/Pendant Mount:

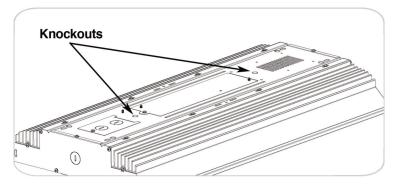

Locate secure structural member and inspect for damage. Knockout 2 x 3/8" KO

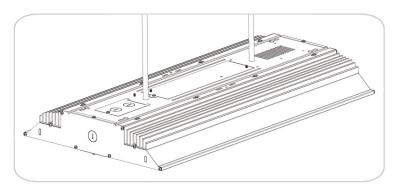

Feed stem into holes and secure with nut.

Page: 5 REV: 11/17/17



Page: 6

REV: 11/17/17

Warranty Information

MaxLite Inc. warrants its products for a minimum period of **FIVE (5)** years from the date of original purchase from MaxLite or its authorized distributor/dealer (the "Warranty Period"), as follows: If a Product fails to operate during the Warranty Period as a result of defects in materials or workmanship, MaxLite will, at its option, repair it, replace it with the same or like Product.

Please refer to Maxlite's website (at http://maxlite.com/resources/warranties) for the complete terms and conditions of our warranty.

Limitation of Liability

THE FOREGOING WARRANTY IS EXCLUSIVE, AND IS THE SOLE REMEDY FOR ANY AND ALL CLAIMS, WHETHER IN CONTRACT, IN TORT OR OTHERWISE ARISING FROM THE FAILURE OF PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED TO THE EXTENT PERMITTED BY LAW AND, IN ANY EVENT, SHALL BE LIMITED TO THE WARRANTY PERIOD SPECIFIED ABOVE. THE LIABILITY OF MAXLITE SHALL BE LIMITED TO THE TERMS OF THE EXPRESS WARRANTY SET FORTH HEREIN. IN NO EVENT WILL MAXLITE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM LOSS OF USE, PROFITS, BUSINESS OR GOODWILL, LABOR COSTS, REMOVAL OR INSTALLATION COSTS, DECREASE IN THE LIGHT OUTPUT OF THE LAMP, AND/OR DETERIORATION IN THE LAMP'S PERFORMANCE, WHETHER OR NOT MAXLITE HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. UNDER NO CIRCUMSTANCES SHALL MAXLITE'S ENTIRE LIABILITY FOR A DEFECTIVE PRODUCT EXCEED THE PURCHASE PRICE OF THAT PRODUCT. WARRANTY SERVICES PROVIDED UNDER THESE TERMS AND CONDITIONS DO NOT ENSURE THE UNINTERRUPTED OPERATION OF PRODUCTS; MAXLITE SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY ANY DELAYS INVOLVING WARRANTY SERVICE.

This Limited Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Because some states or jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, this limitation may not apply to you.