

# LED LINEAR HIGH BAY INSTALLATION INSTRUCTIONS



Risk of fire or electric shock. The electrical rating of these products are 120-277 Vac, the installer must determine whether they have 120-277 V at the luminaire before installation.

Risk of fire or electric shock. LED Commercial High Bay installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.


To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

Disconnect power before installing the product or servicing it.

Wait until fixture has cooled down before installing or servicing the fixture.

## What' s In The Box

One (1) LED High Bay

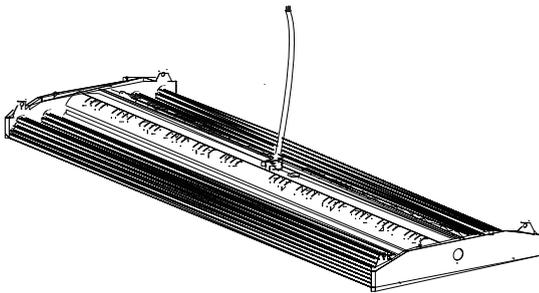

Two(2) hanging ropes



## Tools Needed

This LED High Bay requires very few tools for installation. A screwdriver and a pair of wirecutters will help to install the reflector and fasten the mounting hook.




## Installing Steps




1

**STEP ONE**  
Take out the hanging ropes and adjust them to right and equal length

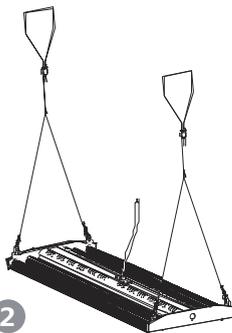

2

**STEP TWO**  
Connect ropes with high bay properly and make sure the high bay is hanging straightly

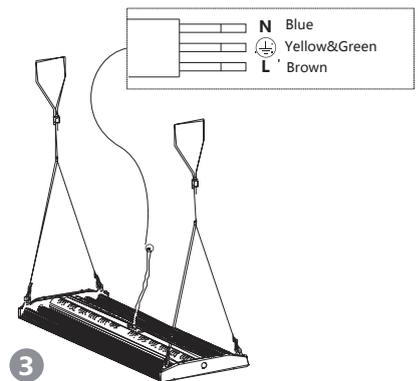

3

**STEP THREE**  
Install the high bay to needed position solidly and finish wiring according to instruction.

N	Blue
⊕	Yellow&Green
L	Brown