


uquired: Pairead screetiver, Philips screetiver, plans, wire callers, wire adoptes, electrical laps, safely glasses surver. (1) LED A10: Bulb MAX 10M ( Not Include). ed Assembly Thes: 10-50 minutes

nation: Monthly and Impoot all parts before beginning traditation. Check puckage content that and diagrams below to be sure all parts are st. If any parts are mining or damaged, do not attempt to assemble, tradel, or operate the titure. Contact customer service for replacement.


## 


Turn off electricity at circuit breaker or main fluse box before installation. Consuit a licensed electricism if in doubt. e instructions are provided for your safe rly. It in very important you read them completely before healthing the folium. Reastonal electricism perform the installation.

Discormed fitches from power source before replacing buibs. Make sure buibs are given sufficient time to cool before removal.

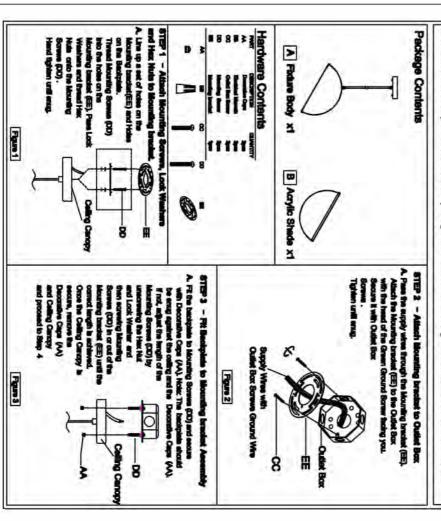




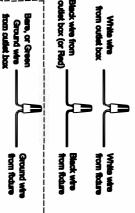

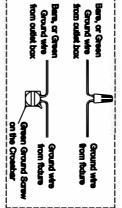

STEP 5 - Install Calling Canopy to Calling Camply took all whee into the outlet box and position the Ceiling Campy of the Fraue Body (A) over the outlet box. Align the hoise n the Colling Caropy with the Mounting Screwe (DD). No Cape (AA) and hand tighten until enug

Figure 4

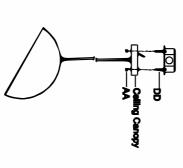

## A. Install bulbe (Not Include) onto sockets and push snug into place. STEP 6 - Inetail Bulbs and Acrylic Shade.

B. Line up the three rectangular holes on Acrylic Shade with the three Screwe on the Fbture Body, press them then twist about 15 degree to let them combined together tightly

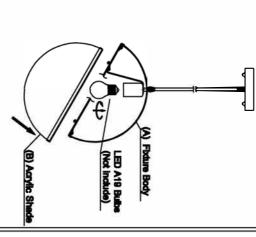


Figure 6